

Ultra Slim Constant Voltage Dimmable LED Driver

ELV/MLV/TRIAC ELECTRONIC DIM

INSTRUCTION

Before you begin, read all warnings and installation instructions thoroughly.



CL-UDR-CV-60W-24V-DIM




CL-UDR-CV-96W-24V-DIM

Quick Specs

| | |
|-----------------------|------------------------|
| Input Voltage | 120VAC |
| Output Voltage | 24VDC / 12VDC |
| Dimming Type | ELV / MLV / TRIAC |
| Input Frequency Range | 60Hz |
| Ambient Temp | -20°C~+45°C |
| Environment | Damp and dry locations |

- Some dimmers may cause low-end flickering. To prevent this, adjust the dimmer's low-end trim setting.

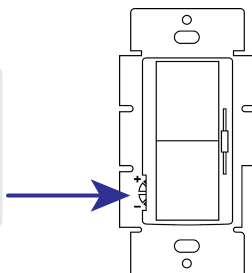

Warning

- To avoid fire, shock, or death, turn the power off at the circuit breaks before wiring.

Mounting the Driver

- Select a suitable location that can provide adequate support for the weight of the driver.
- It is recommended to install the driver vertically for aximum heat dissipation. Install the driver in a well-ventilated area free from explosive gases and vapors. If you are installing more than one driver, keep at least a 6" distance between each driver.

Wire Connections

With the power switched off, connect the wires according to the wiring diagram below.

ELV

MLV / TRIAC

