

MAGNETIC

Ultra-slim track
LIGHTING SYSTEM

INSTALLATION- NEW SURFACE MOUNTED

ACCESSORIES REQUIRED:

NEW SURFACE MOUNTED KIT-ULS

WHICH INCLUDES:

2 × NEW SURFACE KIT MOUNTING PLATE


2 × NEW SURFACE KITS

4 × SCREWS 4 × WALL PLUGS




STEP 1 MARK CENTER LINE WHERE TRACK IS TO BE INSTALLED

NOTE: 24-VOLT POWER COMING FROM CEILING MUST ALIGN WITH THE 24-VOLT INPUT CONNECTOR ON THE TRACK. INPUT CONNECTOR IS LOCATED 5 1/2 INCHES FROM END OF TRACK

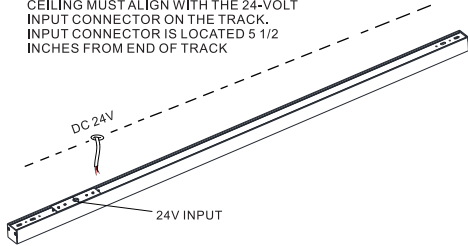


STEP 2 INSTALL SURFACE MOUNT PLATE ALONG CENTER LINE.

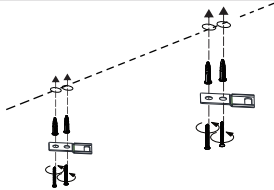


RECOMMENDED:
1 METER 2 KITS
2 METER 3 KITS
3 METER 4 KITS

STEP 3 REMOVE THE SIDE COVER,USE THE PROVIDED ALLEN WRENCH,LOOSEN THE FIXING SCREWS,AND REMOVE THE COVER

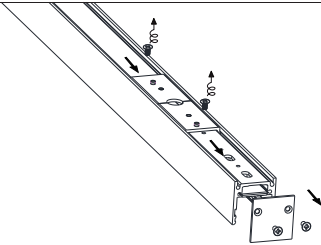


STEP 4 PUSH THE XINMING ASSEMBLY PARTS INTO THE TRACK, THEN PUSH THE POWER INLET COVER BACK,AND INSTALL THE TRACK SIDE COVER WITH SCREWS TO LOCK IT TIGHTLY

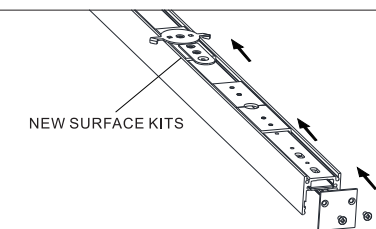

NEW SURFACE KITS

STEP 5 CONNECT 24 VOLT POWER FROM THE DRIVER TO THE 24 VOLT ON THE TRACK, RED WIRE TO POSITIVE AND BLACK WIRE TO NEGATIVE. ATTACH THE WIRE RESTRAINT TO THE POWER CORD.

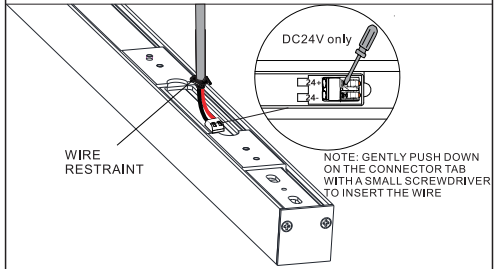


DC24V only


WIRE RESTRAINT

NOTE: GENTLY PUSH DOWN ON THE CONNECTOR TAB WITH A SMALL SCREWDRIVER TO INSERT THE WIRE

STEP 6 SLIDE COVERS BACK OVER ACCESS HOLE AND TIGHTEN SET SCREWS

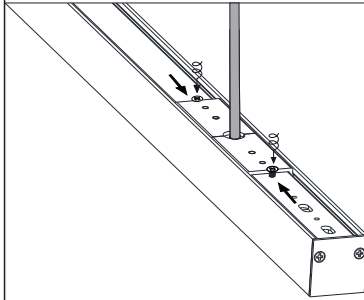

STEP 7 PRESS THE TWO CORNERS ON THE EDGE OF THE NEW EXPOSED ASSEMBLY BY HAND,SLIDE THEM ONTO THE INSTALLATION PLATE AND FIT THEM TOGETHER.ROTATE THE TWO CORNERS ON THE EDGE OF THE NEW EXPOSED ASSEMBLY TO MAKE THEM ROTATE AND FIT WITH THE TRACK

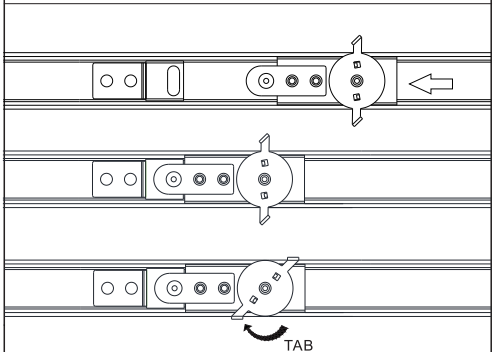

TAB

STEP 8 INSTALL THE ELEMENTS

