

INSTALLATION- PENDANT MOUNTED

ACCESSORIES REQUIRED:

PENDANT KIT-A-ULS WHICH INCLUDES:

- | | |
|-------------------------|-----------------|
| 1 × PENDANT POWER CABLE | 1 × CROSS BAR |
| 1 × ALLEN WRENCH | 2 × LONG SCREWS |
| 1 × WIRE CLIP | 2 × WALL PLUGS |
| 2 × SMALL SCREWS | 1 × M3*4 SCREW |

PENDANT KIT-B-ULS WHICH INCLUDES:

- | | |
|----------------------|-----------------|
| 1 × SUSPENSION CABLE | 1 × CROSS BAR |
| 1 × ALLEN WRENCH | 2 × LONG SCREWS |
| 1 × WIRE CLIP | 2 × WALL PLUGS |
| 2 × SMALL SCREWS | 1 × M3*4 SCREW |


PENDANT KIT-C-ULS WHICH INCLUDES:

- | | |
|----------------------|----------------|
| 1 × SUSPENSION CABLE | 1 × M4*4 SCREW |
| 1 × WALL PLUG | 1 × LONG SCREW |


RECOMMENDED CABLE SUPPORTS: 1 METER 1 PC
2 METER 1-2 PCS
3 METER 2-3PCS

MAGNETIC Ultra-slim track LIGHTING SYSTEM


STEP 3 CONNECT THE POWER CABLE

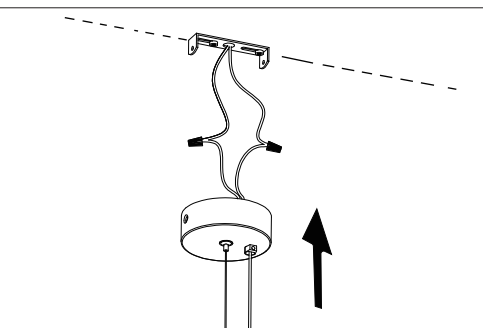


STEP 4 FIX THE CANOPY TO THE CROSS BAR

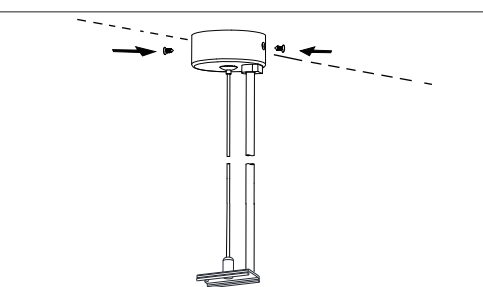


STEP 5 INSTALL THE PENDANT KIT-B-S

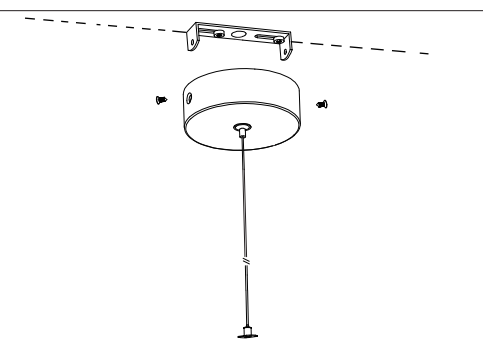


STEP 6 USING THE PROVIDED ALLEN WRENCH, LOOSEN THE SETSCREW. REMOVE THE SCREWS FROM THE SIDE COVERS ON BOTH SIDES OF THE TRACK AND SLIDE OUT ONE OF THE POWER SUPPLY COVERS NEAR THE SIDE COVER

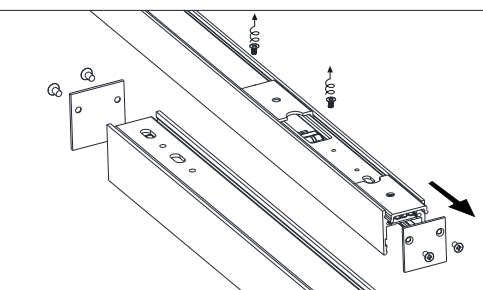

STEP 1 MARK CENTER LINE WHERE TRACK IS TO BE INSTALLED

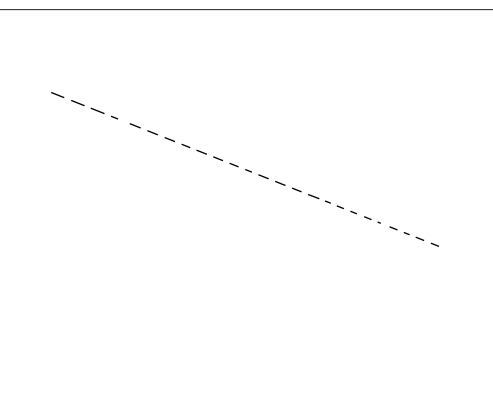


STEP 2 INSTALL CROSS BAR

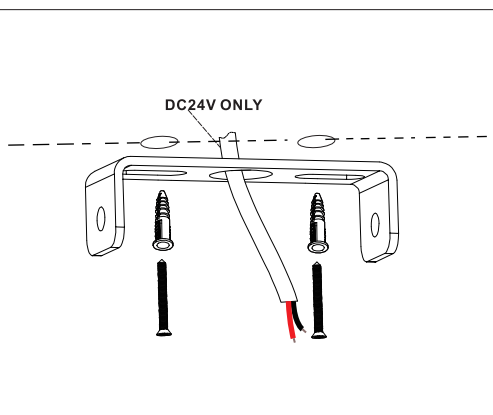


MAGNETIC

Ultra-slim track
LIGHTING SYSTEM


STEP 7 SLIDE THE LIFTING PLATES INTO THE TRACK FROM BOTH ENDS AND REINSTALL THE TRACK SIDE COVER WITH SCREWS

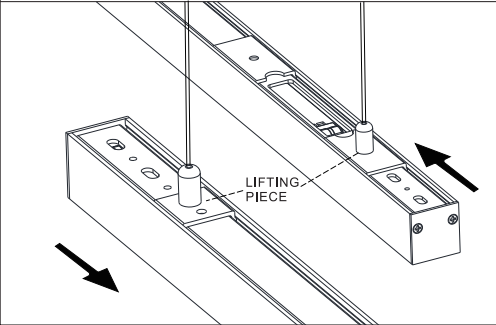

STEP 8 CONNECT 24 VOLT POWER FROM THE DRIVER TO THE 24 VOLT INPUT ON THE TRACK. RED WIRE TO POSITIVE AND BLACK WIRE TO NEGATIVE. ATTACH THE WIRE RESTRAINT TO THE POWER CORD. (NOTE—IF USING A LIVE END FEED INPUT CONNECTOR INSTEAD OF POWERING DIRECTLY TO TRACK, SEE LIVE END FEED INSTRUCTIONS FOR POWERING)

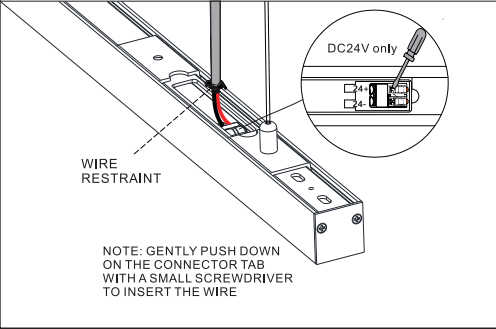

STEP 9 FIX THE LIFTING PLATE AND POWER COVER PLATE WITH SCREWS

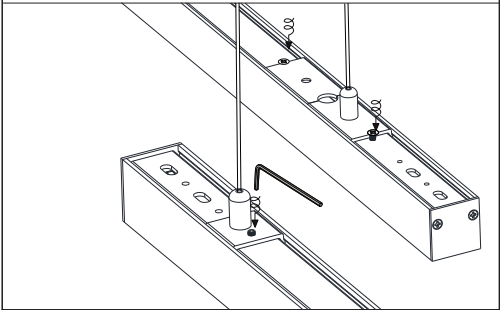

STEP 10 FINISH INSTALLATION OF THE TRACK

